

WELCOME

Welcome to Beni, Your home on wheels...



FIND ALL THE INFO YOU NEED ENCLOSED



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk

BEFORE YOU GO

Please Check...

All buttons are closed on interior compartments so nothing pops open while driving.

Check electric is unplugged before you drive off.

Always keep compartments locked while on the move and lock up interior and exterior compartments after use.

DO NOT DRIVE WITH GAS BOTTLE SWITCHED ON

KEY INFORMATION:

Height: 3.3 Meters

Off Grid: When off grid please use gas for power

*Don't Forget to tag us in your holiday pictures to get
10% off your next booking.*



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk

INVENTORY

All of these items are included in your hire
Please advise us of any breakages so we can replace them for the
next hire.

Kitchen:

4 Plates	<input type="checkbox"/>	<input type="checkbox"/>
4 Melamine mugs	<input type="checkbox"/>	<input type="checkbox"/>
4 Bowls	<input type="checkbox"/>	<input type="checkbox"/>
Bottle opener	<input type="checkbox"/>	<input type="checkbox"/>
Cutlery for 6, Knives, forks, spoons.	<input type="checkbox"/>	<input type="checkbox"/>
Washing up bowl - collapsible	<input type="checkbox"/>	<input type="checkbox"/>
3 Kitchen Knives with safety covers	<input type="checkbox"/>	<input type="checkbox"/>
Kitchen scissors	<input type="checkbox"/>	<input type="checkbox"/>
Grater with bowl	<input type="checkbox"/>	<input type="checkbox"/>
4 pans/saucepans with lids	<input type="checkbox"/>	<input type="checkbox"/>
4 Plastic pint glasses	<input type="checkbox"/>	<input type="checkbox"/>
4 Plastic Wine glasses	<input type="checkbox"/>	<input type="checkbox"/>
4 Plastic tumblers	<input type="checkbox"/>	<input type="checkbox"/>
Chopping board * 2	<input type="checkbox"/>	<input type="checkbox"/>
Tin opener	<input type="checkbox"/>	<input type="checkbox"/>
Corkscrew	<input type="checkbox"/>	<input type="checkbox"/>
Vegetable Peeler	<input type="checkbox"/>	<input type="checkbox"/>
Oven shelf, grill and handle.	<input type="checkbox"/>	<input type="checkbox"/>
Gas Kettle	<input type="checkbox"/>	<input type="checkbox"/>
Electric Kettle	<input type="checkbox"/>	<input type="checkbox"/>
Oven glove - 2 silicone	<input type="checkbox"/>	<input type="checkbox"/>
Plastic spoons/Utensils	<input type="checkbox"/>	<input type="checkbox"/>

Other:

Cool bag	<input type="checkbox"/>	<input type="checkbox"/>
12 volt hairdryer	<input type="checkbox"/>	<input type="checkbox"/>
Gas lighter or matches	<input type="checkbox"/>	<input type="checkbox"/>
TV and Remote control	<input type="checkbox"/>	<input type="checkbox"/>

Safety:

Fire Blanket	<input type="checkbox"/>	<input type="checkbox"/>
Fire Extinguisher	<input type="checkbox"/>	<input type="checkbox"/>
First Aid Kit	<input type="checkbox"/>	<input type="checkbox"/>
X4 High Visibility Vest	<input type="checkbox"/>	<input type="checkbox"/>
Warning Triangle	<input type="checkbox"/>	<input type="checkbox"/>
Carbon Monoxide Detector - fitted	<input type="checkbox"/>	<input type="checkbox"/>
Smoke Alarm	<input type="checkbox"/>	<input type="checkbox"/>
Torch	<input type="checkbox"/>	<input type="checkbox"/>

Cleaning:

1 Tea towel	<input type="checkbox"/>	<input type="checkbox"/>
1 Toilet roll	<input type="checkbox"/>	<input type="checkbox"/>
2 white bin bags	<input type="checkbox"/>	<input type="checkbox"/>
1 Kitchen roll	<input type="checkbox"/>	<input type="checkbox"/>
1 Kitchen sponge	<input type="checkbox"/>	<input type="checkbox"/>
1 Blue Cloth	<input type="checkbox"/>	<input type="checkbox"/>
Dish Drying mat	<input type="checkbox"/>	<input type="checkbox"/>
Mini Dustpan and Brush	<input type="checkbox"/>	<input type="checkbox"/>

External:

Sun Awning	<input type="checkbox"/>	<input type="checkbox"/>
"Space Reserved" triangle (for use in campsites)	<input type="checkbox"/>	<input type="checkbox"/>
Levelling Blocks - 2	<input type="checkbox"/>	<input type="checkbox"/>
Table and bench set for 4	<input type="checkbox"/>	<input type="checkbox"/>



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk



INSTRUCTIONS

Please read for information on general use and internal and external controls of Beni.

External Points

WC Point

(1) Lift up the bottom blue handle to slide the whole compartment out. To empty the toilet waste open the blue lid at the end of the grey tube and whilst tipping the container press the blue button on the top to release the air and help with emptying. After emptying it you pour 100ml of the blue fluid into the tank with a bit of water. This resterilises the tank. What this does is dissolves all the waste and special tissue paper into a blue liquid. So when you empty it, it doesn't smell and empties easily.

1



Fuel

Beni uses Adblue. (2) We will always send you out with a full Adblue however if you are doing a long mileage trip (as we do offer unlimited mileage) you will have to consider Adblue. A warning light will come on on the screen when you're low on fuel to remind you to refill.

2



Electric hook up

On site there should be an electric point near where you park (provided you have booked a pitch with electric hook up). The electric lead found in the garage (8) plugs into this hatch. You connect the lead from the socket to Beni. Batteries can be used and will last a bit of time but it is always advisable where possible to use electric hook up.

3



Water Tank

As a general rule you should travel with minimal water in the tanks and fill the water tank as soon as you get to your destination. In the garage (8) is a hose with universal fittings that should connect to the tap and then place into the water filler cap (4) and fill till it overflows. The taps will be located around the site occasionally you are lucky enough to have one on your pitch but if not each time you need to fill you will need to drive to a tap. Beni holds about 120 litres so it's usually enough for a long weekend.

4



Levelling Blocks

In the garage (8) you will have levelling blocks where if you are parking on a hill or a slope you will need to get these out and drive onto them. It is always advisable to have the vehicle level when you are on your pitch. Levelling blocks are provided and you drive onto this in an effort to get the vehicle as level as possible.

Gas Bottle

If you have chosen to hire a gas bottle **DO NOT TRAVEL WITH IT TURNED ON for safety reasons**. When switched on (at the top of the canister 5) you can use the gas hob and oven. Beni will also heat the water and provide heating using gas. It is always advisable to use electric for hot water and heating if it is available.

5



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk



INSTRUCTIONS

Please read for information on general use and internal and external controls of Beni.

Garage

The garage is where you adjust and control the height of the bed. On the right hand side there's a clip and a white handle (8). Attach this to the small white circular handle (9) clips into it and you can wind the bed up or down using this handle (9). When connected it should look like image (10). Please use for general storage.



6



7

Waste & Water Emptying Taps

Blue Tap= water tank (turn blue tap to empty water tank before travelling home) Grey Tap= Waste (turn to empty shower waste) If you turn either of these taps any waste will leak straight out. When you get to site make sure these taps are closed. Most sites have a drive over motorhome waste drainage facility. Drive over the drain and pull the lever. This will empty the tank.



8



Internal Points

Main Control Panel

This can be found up on the right wall as you come through the door (9). The main panel controls: the lights, water and TV etc. You need to turn the main control panel on using the 1st button= power symbol button. 2nd button= lighting system. 3rd button= indicates when the pump is running for hot water. 4th button= the external light for the awning.

9



Buttons along the bottom:

1st button= tells you what your leisure battery power is at. 2nd button= tells you what the vehicle battery is level at. 3rd button= tells you your water level. 4th button= to adjust the brightness of the screen.



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk



INSTRUCTIONS

Please read for information on general use and internal and external controls of Beni.

Truma Control Panel

This controls the heat temperature, water and fan speed (10). Press the big black button to turn it on. 1st icon (on screen)= controls heating. Turn the nozzle to adjust the heating temperature. 2nd button=water temperature. You can have it on modes: eco, boost or hot. Boost heats water instantly, Hot will give you permanent 60° water. Eco will give you permanent 40° water. 3rd button= selects how you want to run the unit. Option 1: electric & you can adjust the wattage. 1 is a lower wattage and 2 is a higher wattage. Mode mix means you can use gas & electric. Gas is also a mode on its own. Fan speed you can alter too high or eco. The permanent symbol on the right hand side of the screen indicates what mode you're currently using/in.

10



Toilet & Shower

With water turned on the taps should flow. When the hot water is on it will be very hot - not plugged in and boiling. There is a clip across shower screen please use this when in the shower. Two special toilet rolls are provided (in compartment in the toilet) you will need to use. We sell a full pack for £3.99. The BLUE button is the flush. The GREY handle (on the bottom right hand side of the toilet) is the release. **After Use: Flush and release then flush it again to give it a rinse.** That drops it all into the tank.

Blinds

They meet together by magnet but you need to press the buttons in on the handle connector parts for them to engage and move down or across.

Extendable Table

To extend the table use the thick black knob under the table. Pull this knob down to release the table and swivel it round to reconnect and align up with the other part. To put it back just twist the table back round and it automatically clicks back into place.

11



Hob

When Beni is plugged into the electrics you will have 1 electric stove and 2 gas but you will have to have your gas bottle on when using these.

The Oven is a standard gas oven.

Fridge Freezer

The fridge has 3 modes. (12) **A is for automatic we recommend you leaving it on automatic** as this mode automatically chooses the best source. For example: if there is no electric available it will automatically turn to gas. Electric is 1st choice then gas then battery. When driving the fridge will automatically use battery mode.

12



Ceiling Fan

To turn it on, first you need to open the roof light by turning the white circular button on the left (13). Then turn the fan on, you can set which direction you want it going. Keep pressing the button as it lights up to make it pick up speed.

13



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk



INSTRUCTIONS

Please read for information on general use and internal and external controls of Beni.

Electric Ceiling Bed

Use the bottom black switch (14) to lower the bed down and then switch it back across to raise it.

14



Windows

On all of the windows there are releasing levers. The small buttons need to be pressed in while lifting the handle or they won't release.

TV

The TV does work on 12 volt so it can run off the vehicles battery and play without electric. You also have to retune the TV as Beni travels to and from different regions. To do this on the remote press *Menu* then *Auto scan* and it will scan all the channels for you.

Front Drivers Chairs

These chairs can swivel round. To do this pull the lever down on the bottom side of the chairs to swivel them round. These swing round but if the chair is not in the correct position (ie. Slide forward or back) they will catch on the steering wheel or table. Please be careful as these are easily damageable.

Safety Equipment

Safety blankets, fire extinguisher, a torch with emergency red flashing lights, first aid kit and manuals in the black bag are available to use kept in (15) under the step. Beni has a spare wheel kept in the garage (8).

15



Smoke Alarms

Smoke and Carbon dioxide detector in the ceiling.

Mains Electric Compartment

If you lose mains power go to the electric mains compartment under the bench sofa nearest to the main door. This holds the trips switches and internal fuses for the pump and fridge etc. The red light indicates power on/off.

Awning

The awning sits in the top left hand side of Beni where the main door is. (16) To open this there is a pole which you clip in and use to unwind the awning when it comes out two legs pop out then you level it off using the two legs.

16



07484705242



bookings@heycampers.co.uk



www.heycampers.co.uk

